

# Installation notes for SEPURA™ oil-water separators



superior technologies

For compressed air systems up to 16bar


Install unit on a firm level floor, frost free and out of direct sunlight.

Either connect all condensate drains to a single header pipe that drains to the separator - or connect individually (as shown) to the connector block on the SEPURA™ unit depending upon your specific site layout.

Route the outlet to a foul drain (sewer), making sure there is good 'fall', unrestricted flow and no possibility of syphoning.\*

**DO NOT** add waste oil etc. to the separator - it is not designed for this purpose.

Replace the service kit (filter set) at least annually or more often if recommended by your supplier.

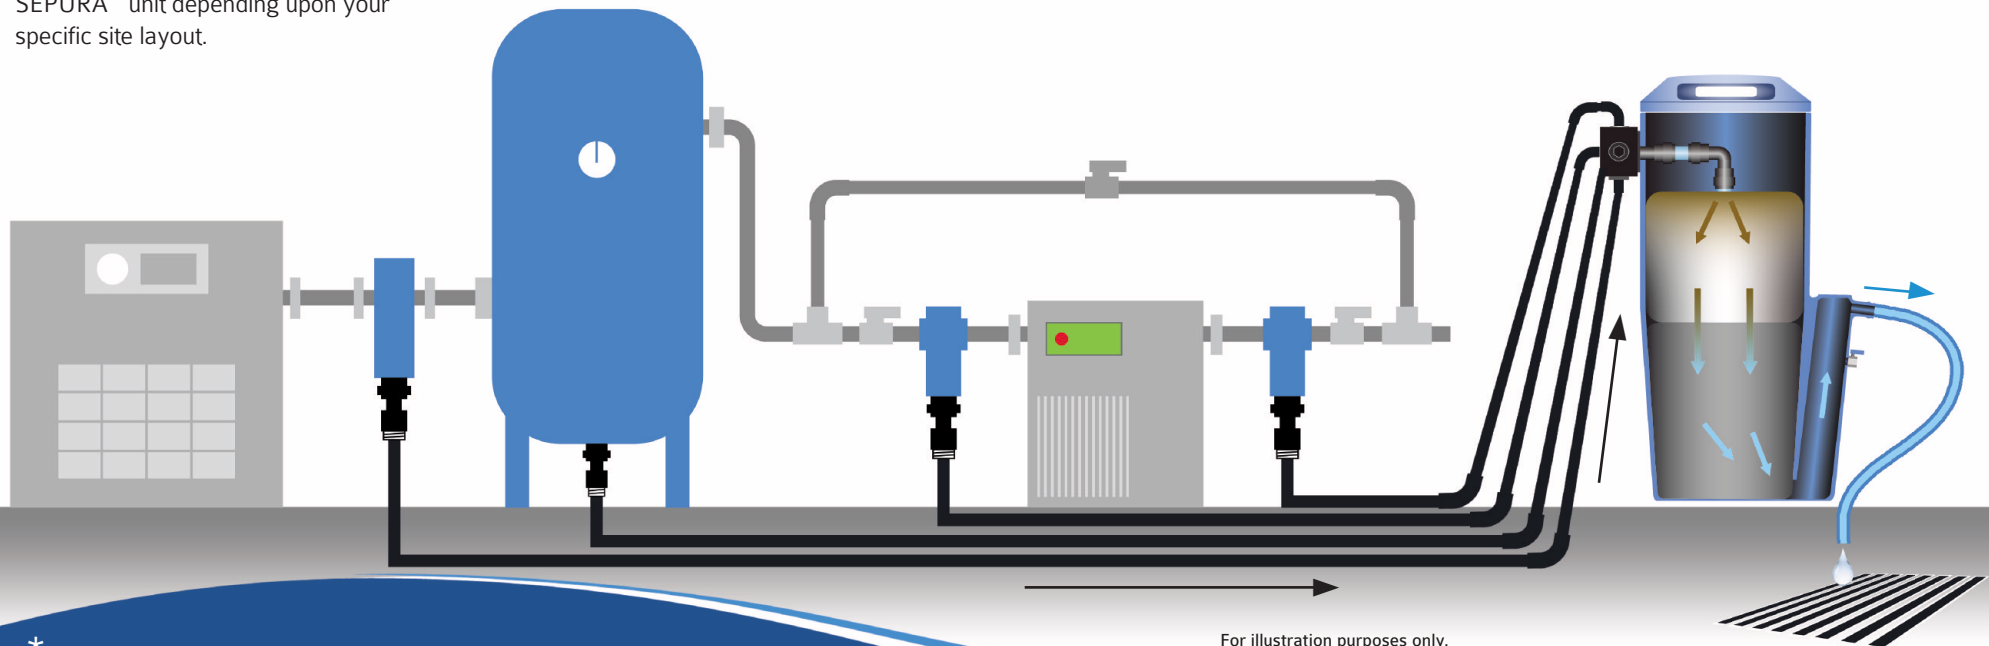

For illustration purposes only.  
Not to scale or representative of particular products or brands.

\* **RECOMMENDED** to route to a foul drain.  
It is the user's responsibility to ensure the legality of discharges in their area, and to ensure regular (weekly) checks on the separators's performance.